

Smart Dimensions

Smart Dimensioning allows you to mouse over your model(s) and quickly determine object point coordinates and lengths, distances between objects, angle measurements, and more.

Depending on the object, SpinFire will present a menu of possible measurement choices.

With this command, you can quickly and easily determine edge lengths, edge to point and edge to arc center distances, and the minimum distance between two edges. You can also choose to measure arc characteristics, such as diameter, radius, center coordinates, and the distance between two arc centers.

Use this command to quickly and easily determine surface point coordinates; distances between a surface and a point, edge, or another surface; and surface angles.

Related Topics

[Keyboard Shortcuts](#)

[Working with Smart Dimensions](#)

[2D Viewer Settings](#)

[3D Viewer Settings](#)

